



## Nova Remote Control User Guide



### 1. Inserting batteries

1. Press the indent on the battery housing cover and slide it downwards to remove.
2. Insert 2 x AA batteries, observing the correct polarity.
3. Refit the battery housing cover.



### Battery information

Do not mix different types of battery or old and new batteries.

Do not use rechargeable batteries with the remote control. Do not attempt to recharge the batteries.

Remove the batteries from the remote control if you are not going to use it for several weeks, to avoid the risk of leakage.


Immediately remove any leaking batteries. Take care when handling leaking batteries as they may cause burns to the skin or eyes, or other physical injuries.

Please respect the environment and any local regulations and dispose of old batteries in a responsible manner.

### 2. Remote control layout

- |   |  |
|---|--|
| 1 Power on/off button   | 19 VOD button*   |
| 2 TV input select button  | 20 Colour buttons*   |
| 3 Device control buttons for TV, STB, DVD or AUX (if programmed)                  | 21 Channel up and down buttons or Page up and down buttons for EPG |
| 4 Options button for on-screen menu items   | 22 Mute button   |
| 5 Back button   | 23 Channel and text entry buttons                                  |
| 6 On-screen menu button   | 24 Closed captions on/off button                                   |
| 7 Exit from on-screen menu (or back to Live TV) button                            | 25 Media button*   |
| 8 Electronic program guide (EPG) button   |  |
| 9 Previous channel select button  |  |
| 10 Volume up and down buttons   |  |
| 11 Input button for a full stop (period) or for displaying the on-screen keyboard |  |
| 12 DVR button*  |  |
| 13 Live TV button*  |  |
| 14 Setup button for Nova  |  |
| 15 Transport buttons for Live TV, DVR or VOD                                      |  |
| 16 Record start/stop button   |  |
| 17 Program information button   |  |
| 18 Navigation and OK buttons  |  |

**\*Note:** Some button functionality (for example, DVR) may not be available on specific models of STB, and availability of certain features is dependent on your service provider.

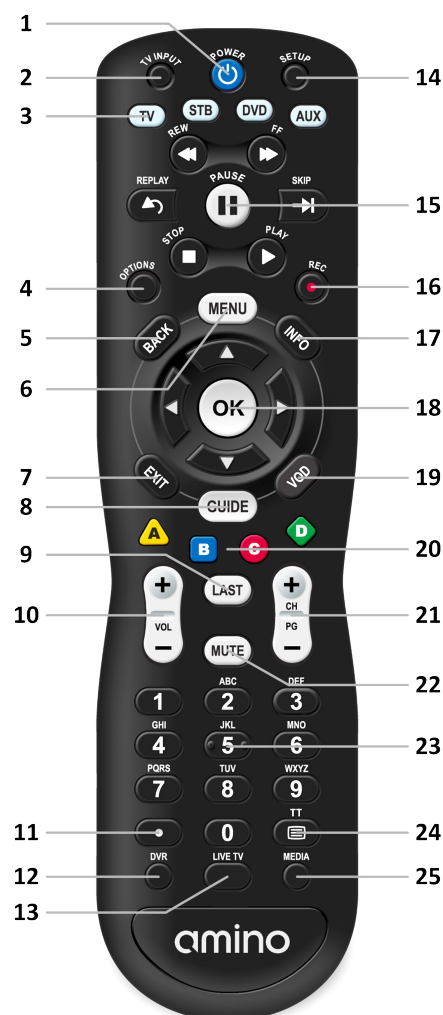

### 3. Remote control setup: Brand Search

The Nova remote control can be programmed to operate your TV set or another device, for example a DVD player. The Nova does this by registering a 5-digit brand code that is specific to the device.

1. Note the brand of your device, then find its 5-digit brand code by referring to the brand code tables on the Amino support site ([www.aminocom.com/support](http://www.aminocom.com/support)). Make a note of the 5-digit brand code.
2. Make sure your device is turned on.
3. On the remote control, press the **device control** button (3) for the device you want to control, for example if you want to control a DVD player, press **DVD**.
4. Press and hold the **Setup** button (14) for approximately three seconds until the device control button flashes twice.
5. Enter the 5-digit brand code for your device. On each digit entry the device control button will flash. If you make an error, the LED will give a single long flash.
6. Press the **Power on** button (1). If your device turns off then setup is complete.
7. If your device does not turn off, repeat the setup procedure using another code (if listed) for the device. You may need to try several codes.

If you change your device to a different brand and the remote control requires re-programming, repeat this brand search procedure with your new device.

If your device is not listed, or you have tried all the codes listed for it and it still does not respond to the remote control, your device may still be supported and you should try the Auto Search method.

### 4. Remote control setup: Auto Search

If your device cannot be found by the previous brand search method and you have tried all the codes listed for that device, then Auto Search can be used.

1. Make sure your device is turned on.



2. On the remote control, press the **device control** button for your device.
3. Press and hold the **Setup** button for approximately three seconds until the device control button flashes twice.
4. Press the number buttons **9 9 1** then press the **Power** button.
5. Press the **CH+** button repeatedly until your device turns off.
6. Press and hold the **Setup** button until the device control button flashes twice. The brand code is now saved.

### 5. Key 'punch through' setup

When you have configured the Nova remote control to work with a selected device, the remote control buttons will operate that device. However, specific buttons can be sent to another device by using the 'punch through' feature: for example you may want to send the volume up and down buttons to an AUX device rather than to your TV set.

1. Press and hold the **Setup** button for approximately three seconds until the device control button flashes twice.
2. Press the number buttons **9 7 8**
3. Press the **device control** button for the device you want to control, for example if you want to control a DVD player, press **DVD**.
4. Press the keys you want to punch through, for example Volume up and down, Mute.
5. Press the device control button for the device(s) you want to target, for example **STB**, **DVD**.
6. Press and hold the **Setup** button for approximately three seconds until the device control button flashes twice. The 'punch through' setup is now complete.
7. If you make an error, the LED will give a single long flash.

### 6. Resetting the remote control

#### Resetting Brand Search or Auto Search

1. Press and hold the **Setup** button for approximately three seconds until the device control button flashes twice.
2. Press the number buttons **9 7 7**
3. Press and hold the **Setup** button for approximately three seconds until the device control button flashes twice.
4. If you make an error, the LED will give a single long flash.

#### Resetting 'punch through'

1. Press and hold the **Setup** button for approximately three seconds until the device control button flashes twice.
2. Press the number buttons **9 7 8**
3. Press and hold the **Setup** button for approximately three seconds until the device control button flashes twice.
4. If you make an error, the LED will give a single long flash.

### FCC statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation of the device.

#### IMPORTANT NOTE:

RF exposure warning statement:

- 1) This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- 2) This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimetres between the radiator and your body. Operation of this device is restricted to indoor use only.

### Industry Canada statement

This device complies with ISSED's licence-exempt RSSs. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'ISSED applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- 1) le dispositif ne doit pas produire de brouillage préjudiciable, et
- 2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

#### Radiation Exposure Statement:

This equipment complies with ISSED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

#### Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements ISSED établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.